


- 1 SURFACE AND PIPE SHALL BE CLEANED AND PRIMED.AS NEEDED.
- 2 APPLY FLEXOBIT MEMBRANE TO DECK.
- 3 FLEXOBIT COLLAR TO HAVE HOLE CUT TO DIAMETER SMALLER THAN PIPE TO ALLOW FOR SNUG FIT WHEN INSTALLED OVER PIPE.
- 4 TORCH WELD FLEXOBIT COLLAR TO FLEXOBIT SURFACE.
- 5 FLEXOBIT END POINTS SURROUNDING PIPE ARE TO BE COATED WITH TORCH MELTED FLEXOBIT.
- 6 PIPES EXPOSED TO UV TO HAVE SLATED UV FLEXOWALL MEMBRANE FLASHING COLLAR INSTALLED OVER FLEXOBIT COLLAR.

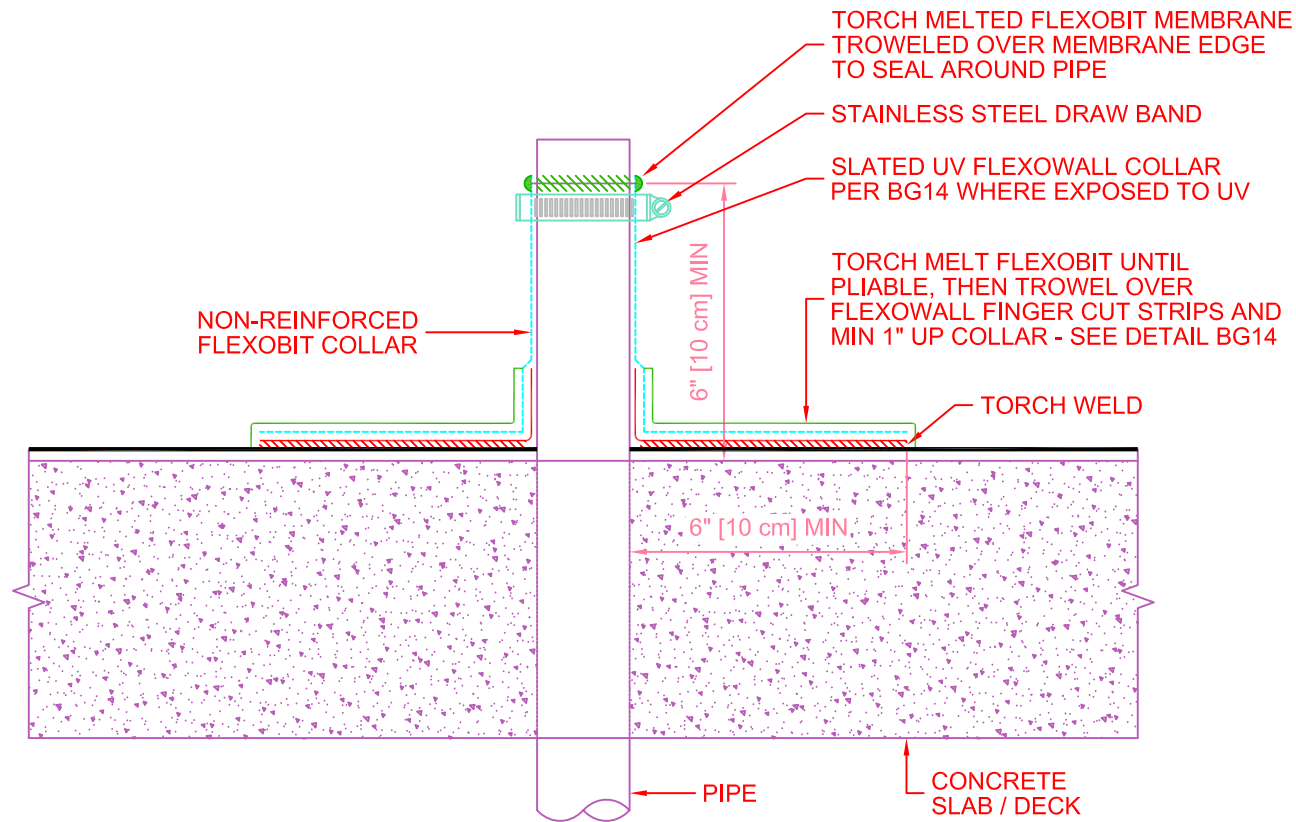

SECTION VIEW

PIPE PENETRATION AT SLAB
(WITH UV EXPOSURE)